

Fundamentals Relay Products & Accessories

Item	Product/ System Codes	Product Description	Auxiliary Supply (V)	Voltage Inputs	Current Inputs	Nominal Current (A)	Auto/ Manual Selector (RTMU)	Case Colour	Comments																																																														
<table border="1"> <thead> <tr> <th>System Codes</th> <th>SuperTAPP n+ Systems</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>FSTNA1-1</td> <td>SuperTAPP n+ Advanced System (FP1014-V2C3-S01 & FP0005-RTMU/1m-1-C02)</td> <td rowspan="9" style="text-align: center;">(For details, refer to single units below)</td> <td rowspan="9" style="text-align: center;">(For details, refer to single units below)</td> <td rowspan="9" style="text-align: center;">(For details, refer to single units below)</td> <td rowspan="9" style="text-align: center;">(For details, refer to single units below)</td> <td rowspan="9" style="text-align: center;">(For details, refer to single units below)</td> <td>Grey</td> <td>Advanced functions for DG, triple winding transformers etc.</td> </tr> <tr> <td>2</td> <td>FSTNA2-1</td> <td>SuperTAPP n+ Advanced System (FP1014-V2C3-S01 & FP0005-RTMU/2m-1-C02)</td> <td>Grey</td> <td>Advanced functions for DG, triple winding transformers etc.</td> </tr> <tr> <td>3</td> <td>FSTNB1-1</td> <td>SuperTAPP n+ Basic System (FP1014-V1C1-S01 & FP0005-RTMU/1m-1-C02)</td> <td>Grey</td> <td>Standard voltage control functions.</td> </tr> <tr> <td>4</td> <td>FSTNB2-1</td> <td>SuperTAPP n+ Basic System (FP1014-V1C1-S01 & FP0005-RTMU/2m-1-C02)</td> <td>Grey</td> <td>Standard voltage control functions.</td> </tr> <tr> <td>5</td> <td>FSTNA1-2</td> <td>SuperTAPP n+ Advanced System (FP1014-V2C3-S01 & FP0005-RTMU/1m-2-C02)</td> <td>Grey</td> <td>Advanced functions for DG, triple winding transformers etc.</td> </tr> <tr> <td>6</td> <td>FSTNA2-2</td> <td>SuperTAPP n+ Advanced System (FP1014-V2C3-S01 & FP0005-RTMU/2m-2-C02)</td> <td>Grey</td> <td>Advanced functions for DG, triple winding transformers etc.</td> </tr> <tr> <td>7</td> <td>FSTNB1-2</td> <td>SuperTAPP n+ Basic System (FP1014-V1C1-S01 & FP0005-RTMU/1m-2-C02)</td> <td>Grey</td> <td>Standard voltage control functions.</td> </tr> <tr> <td>8</td> <td>FSTNB2-2</td> <td>SuperTAPP n+ Basic System (FP1014-V1C1-S01 & FP0005-RTMU/2m-2-C02)</td> <td>Grey</td> <td>Standard voltage control functions.</td> </tr> <tr> <td>9</td> <td>FSTNBUPA</td> <td>SuperTAPP n+ Basic to Advanced Upgrade (& 2 x FP1030-CT1000-1-S01)</td> <td>Grey</td> <td>Advanced functions activated by software key code.</td> </tr> </tbody> </table>			System Codes	SuperTAPP n+ Systems	1	FSTNA1-1	SuperTAPP n+ Advanced System (FP1014-V2C3-S01 & FP0005-RTMU/1m-1-C02)	(For details, refer to single units below)	(For details, refer to single units below)	(For details, refer to single units below)	(For details, refer to single units below)	(For details, refer to single units below)	Grey	Advanced functions for DG, triple winding transformers etc.	2	FSTNA2-1	SuperTAPP n+ Advanced System (FP1014-V2C3-S01 & FP0005-RTMU/2m-1-C02)	Grey	Advanced functions for DG, triple winding transformers etc.	3	FSTNB1-1	SuperTAPP n+ Basic System (FP1014-V1C1-S01 & FP0005-RTMU/1m-1-C02)	Grey	Standard voltage control functions.	4	FSTNB2-1	SuperTAPP n+ Basic System (FP1014-V1C1-S01 & FP0005-RTMU/2m-1-C02)	Grey	Standard voltage control functions.	5	FSTNA1-2	SuperTAPP n+ Advanced System (FP1014-V2C3-S01 & FP0005-RTMU/1m-2-C02)	Grey	Advanced functions for DG, triple winding transformers etc.	6	FSTNA2-2	SuperTAPP n+ Advanced System (FP1014-V2C3-S01 & FP0005-RTMU/2m-2-C02)	Grey	Advanced functions for DG, triple winding transformers etc.	7	FSTNB1-2	SuperTAPP n+ Basic System (FP1014-V1C1-S01 & FP0005-RTMU/1m-2-C02)	Grey	Standard voltage control functions.	8	FSTNB2-2	SuperTAPP n+ Basic System (FP1014-V1C1-S01 & FP0005-RTMU/2m-2-C02)	Grey	Standard voltage control functions.	9	FSTNBUPA	SuperTAPP n+ Basic to Advanced Upgrade (& 2 x FP1030-CT1000-1-S01)	Grey	Advanced functions activated by software key code.																	
System Codes	SuperTAPP n+ Systems																																																																						
1	FSTNA1-1	SuperTAPP n+ Advanced System (FP1014-V2C3-S01 & FP0005-RTMU/1m-1-C02)	(For details, refer to single units below)	(For details, refer to single units below)	(For details, refer to single units below)	(For details, refer to single units below)	(For details, refer to single units below)						Grey	Advanced functions for DG, triple winding transformers etc.																																																									
2	FSTNA2-1	SuperTAPP n+ Advanced System (FP1014-V2C3-S01 & FP0005-RTMU/2m-1-C02)											Grey	Advanced functions for DG, triple winding transformers etc.																																																									
3	FSTNB1-1	SuperTAPP n+ Basic System (FP1014-V1C1-S01 & FP0005-RTMU/1m-1-C02)											Grey	Standard voltage control functions.																																																									
4	FSTNB2-1	SuperTAPP n+ Basic System (FP1014-V1C1-S01 & FP0005-RTMU/2m-1-C02)											Grey	Standard voltage control functions.																																																									
5	FSTNA1-2	SuperTAPP n+ Advanced System (FP1014-V2C3-S01 & FP0005-RTMU/1m-2-C02)											Grey	Advanced functions for DG, triple winding transformers etc.																																																									
6	FSTNA2-2	SuperTAPP n+ Advanced System (FP1014-V2C3-S01 & FP0005-RTMU/2m-2-C02)											Grey	Advanced functions for DG, triple winding transformers etc.																																																									
7	FSTNB1-2	SuperTAPP n+ Basic System (FP1014-V1C1-S01 & FP0005-RTMU/1m-2-C02)											Grey	Standard voltage control functions.																																																									
8	FSTNB2-2	SuperTAPP n+ Basic System (FP1014-V1C1-S01 & FP0005-RTMU/2m-2-C02)						Grey	Standard voltage control functions.																																																														
9	FSTNBUPA	SuperTAPP n+ Basic to Advanced Upgrade (& 2 x FP1030-CT1000-1-S01)						Grey	Advanced functions activated by software key code.																																																														
<table border="1"> <thead> <tr> <th>System Codes</th> <th>SuperTAPP Systems</th> </tr> </thead> <tbody> <tr> <td>10</td> <td>FST1-1</td> <td>SuperTAPP System (FP0004-RVM/5m-1-S01 & FP0005-RTMU/1m-1-C01)</td> <td>110V AC</td> <td rowspan="4" style="text-align: center;">(For details, refer to single units below)</td> <td rowspan="4" style="text-align: center;">(For details, refer to single units below)</td> <td rowspan="4" style="text-align: center;">(For details, refer to single units below)</td> <td rowspan="4" style="text-align: center;">(For details, refer to single units below)</td> <td>2 position</td> <td>Black</td> <td>Black mounting bracket for 19" rack.</td> </tr> <tr> <td>11</td> <td>FST2-1</td> <td>SuperTAPP System (FP0004-RVM/5m-1-S01 & FP0005-RTMU/2m-1-C01)</td> <td>110V AC</td> <td>3 position</td> <td>Black</td> <td>Black mounting bracket for 19" rack.</td> </tr> <tr> <td>12</td> <td>FST1-2</td> <td>SuperTAPP System (FP0004-RVM/5m-2-S01 & FP0005-RTMU/1m-2-C01)</td> <td>220V AC</td> <td>2 position</td> <td>Black</td> <td>Black mounting bracket for 19" rack.</td> </tr> <tr> <td>13</td> <td>FST2-2</td> <td>SuperTAPP System (FP0004-RVM/5m-2-S01 & FP0005-RTMU/2m-2-C01)</td> <td>220V AC</td> <td>3 position</td> <td>Black</td> <td>Black mounting bracket for 19" rack.</td> </tr> </tbody> </table>			System Codes	SuperTAPP Systems	10	FST1-1	SuperTAPP System (FP0004-RVM/5m-1-S01 & FP0005-RTMU/1m-1-C01)	110V AC	(For details, refer to single units below)	(For details, refer to single units below)	(For details, refer to single units below)	(For details, refer to single units below)	2 position	Black	Black mounting bracket for 19" rack.	11	FST2-1	SuperTAPP System (FP0004-RVM/5m-1-S01 & FP0005-RTMU/2m-1-C01)	110V AC	3 position	Black	Black mounting bracket for 19" rack.	12	FST1-2	SuperTAPP System (FP0004-RVM/5m-2-S01 & FP0005-RTMU/1m-2-C01)	220V AC	2 position	Black	Black mounting bracket for 19" rack.	13	FST2-2	SuperTAPP System (FP0004-RVM/5m-2-S01 & FP0005-RTMU/2m-2-C01)	220V AC	3 position	Black	Black mounting bracket for 19" rack.																																			
System Codes	SuperTAPP Systems																																																																						
10	FST1-1	SuperTAPP System (FP0004-RVM/5m-1-S01 & FP0005-RTMU/1m-1-C01)	110V AC	(For details, refer to single units below)	(For details, refer to single units below)	(For details, refer to single units below)	(For details, refer to single units below)	2 position					Black	Black mounting bracket for 19" rack.																																																									
11	FST2-1	SuperTAPP System (FP0004-RVM/5m-1-S01 & FP0005-RTMU/2m-1-C01)	110V AC					3 position					Black	Black mounting bracket for 19" rack.																																																									
12	FST1-2	SuperTAPP System (FP0004-RVM/5m-2-S01 & FP0005-RTMU/1m-2-C01)	220V AC					2 position	Black	Black mounting bracket for 19" rack.																																																													
13	FST2-2	SuperTAPP System (FP0004-RVM/5m-2-S01 & FP0005-RTMU/2m-2-C01)	220V AC					3 position	Black	Black mounting bracket for 19" rack.																																																													
<table border="1"> <thead> <tr> <th>Product Codes</th> <th>SuperTAPP n+ (Single Units)</th> </tr> </thead> <tbody> <tr> <td>14</td> <td>FP1014-V2C3-S01</td> <td>SuperTAPP n+ Advanced Voltage Control Relay (& 3 x FP1030-CT1000-1-S01)</td> <td>80-250V AC/DC</td> <td>2x110V VTs</td> <td>3xCTs</td> <td>0.5 to 5A</td> <td rowspan="3" style="text-align: center;">(For details, refer to single units below)</td> <td>Grey</td> <td>Advanced functions for DG, triple winding transformers etc.</td> </tr> <tr> <td>15</td> <td>FP1014-V1C1-S01</td> <td>SuperTAPP n+ Basic Voltage Control Relay (& 1 x FP1030-CT1000-1-S01)</td> <td>80-250V AC/DC</td> <td>1x110V VT</td> <td>1xCT</td> <td>0.5 to 5A</td> <td>Grey</td> <td>Standard voltage control functions.</td> </tr> <tr> <td>16</td> <td>FP1026-V2C6-S01</td> <td>Data Acquisition Module (DAM) (& 6 x FP1030-CT1000-1-S01)</td> <td>80-250V AC/DC</td> <td>2x110V VTs</td> <td>6xCTs</td> <td>0.5 to 5A</td> <td>Grey</td> <td>CT measurements expansion module for SuperTAPP n+ systems.</td> </tr> <tr> <td>17</td> <td>FP1030-CT1000-1-S01</td> <td>Interposing Current Transformer (ICT)</td> <td colspan="5"></td> <td></td> <td></td> <td>Interposing CT (1,000/1 ratio).</td> </tr> </tbody> </table>			Product Codes	SuperTAPP n+ (Single Units)	14	FP1014-V2C3-S01	SuperTAPP n+ Advanced Voltage Control Relay (& 3 x FP1030-CT1000-1-S01)	80-250V AC/DC	2x110V VTs	3xCTs	0.5 to 5A	(For details, refer to single units below)	Grey	Advanced functions for DG, triple winding transformers etc.	15	FP1014-V1C1-S01	SuperTAPP n+ Basic Voltage Control Relay (& 1 x FP1030-CT1000-1-S01)	80-250V AC/DC	1x110V VT	1xCT	0.5 to 5A	Grey	Standard voltage control functions.	16	FP1026-V2C6-S01	Data Acquisition Module (DAM) (& 6 x FP1030-CT1000-1-S01)	80-250V AC/DC	2x110V VTs	6xCTs	0.5 to 5A	Grey	CT measurements expansion module for SuperTAPP n+ systems.	17	FP1030-CT1000-1-S01	Interposing Current Transformer (ICT)								Interposing CT (1,000/1 ratio).																												
Product Codes	SuperTAPP n+ (Single Units)																																																																						
14	FP1014-V2C3-S01	SuperTAPP n+ Advanced Voltage Control Relay (& 3 x FP1030-CT1000-1-S01)	80-250V AC/DC	2x110V VTs	3xCTs	0.5 to 5A	(For details, refer to single units below)	Grey	Advanced functions for DG, triple winding transformers etc.																																																														
15	FP1014-V1C1-S01	SuperTAPP n+ Basic Voltage Control Relay (& 1 x FP1030-CT1000-1-S01)	80-250V AC/DC	1x110V VT	1xCT	0.5 to 5A		Grey	Standard voltage control functions.																																																														
16	FP1026-V2C6-S01	Data Acquisition Module (DAM) (& 6 x FP1030-CT1000-1-S01)	80-250V AC/DC	2x110V VTs	6xCTs	0.5 to 5A		Grey	CT measurements expansion module for SuperTAPP n+ systems.																																																														
17	FP1030-CT1000-1-S01	Interposing Current Transformer (ICT)								Interposing CT (1,000/1 ratio).																																																													
<table border="1"> <thead> <tr> <th>Product Codes</th> <th>SuperTAPP (Single Units)</th> </tr> </thead> <tbody> <tr> <td>18</td> <td>FP0004-RVM/5m-1-S01</td> <td>SuperTAPP Voltage Regulating Relay</td> <td>110V AC</td> <td>1x110V VT</td> <td>1xCT</td> <td>0.5, 1, 5A</td> <td rowspan="4" style="text-align: center;">(For details, refer to single units below)</td> <td>Black</td> <td>Horizontal case.</td> </tr> <tr> <td>19</td> <td>FP0004-RVM/5m-2-S01</td> <td>SuperTAPP Voltage Regulating Relay</td> <td>220V AC</td> <td>1x110V VT</td> <td>1xCT</td> <td>0.5, 1, 5A</td> <td>Black</td> <td>Horizontal case.</td> </tr> <tr> <td>20</td> <td>FP0004-RVM/4m-1-S01</td> <td>SuperTAPP Voltage Regulating Relay</td> <td>110V AC</td> <td>1x110V VT</td> <td>1xCT</td> <td>0.5, 1, 5A</td> <td>Black</td> <td>Vertical case.</td> </tr> <tr> <td>21</td> <td>FP0004-RVM/4m-2-S01</td> <td>SuperTAPP Voltage Regulating Relay</td> <td>220V AC</td> <td>1x110V VT</td> <td>1xCT</td> <td>0.5, 1, 5A</td> <td>Black</td> <td>Vertical case.</td> </tr> </tbody> </table>			Product Codes	SuperTAPP (Single Units)	18	FP0004-RVM/5m-1-S01	SuperTAPP Voltage Regulating Relay	110V AC	1x110V VT	1xCT	0.5, 1, 5A	(For details, refer to single units below)	Black	Horizontal case.	19	FP0004-RVM/5m-2-S01	SuperTAPP Voltage Regulating Relay	220V AC	1x110V VT	1xCT	0.5, 1, 5A	Black	Horizontal case.	20	FP0004-RVM/4m-1-S01	SuperTAPP Voltage Regulating Relay	110V AC	1x110V VT	1xCT	0.5, 1, 5A	Black	Vertical case.	21	FP0004-RVM/4m-2-S01	SuperTAPP Voltage Regulating Relay	220V AC	1x110V VT	1xCT	0.5, 1, 5A	Black	Vertical case.																														
Product Codes	SuperTAPP (Single Units)																																																																						
18	FP0004-RVM/5m-1-S01	SuperTAPP Voltage Regulating Relay	110V AC	1x110V VT	1xCT	0.5, 1, 5A	(For details, refer to single units below)	Black	Horizontal case.																																																														
19	FP0004-RVM/5m-2-S01	SuperTAPP Voltage Regulating Relay	220V AC	1x110V VT	1xCT	0.5, 1, 5A		Black	Horizontal case.																																																														
20	FP0004-RVM/4m-1-S01	SuperTAPP Voltage Regulating Relay	110V AC	1x110V VT	1xCT	0.5, 1, 5A		Black	Vertical case.																																																														
21	FP0004-RVM/4m-2-S01	SuperTAPP Voltage Regulating Relay	220V AC	1x110V VT	1xCT	0.5, 1, 5A		Black	Vertical case.																																																														
<table border="1"> <thead> <tr> <th>Product Codes</th> <th>SuperTAPP (Single Units)</th> </tr> </thead> <tbody> <tr> <td>22</td> <td>FP0005-RTMU/1m-1-C01</td> <td>SuperTAPP Tap Changer Control & Monitor Unit</td> <td>110V AC</td> <td>1x3Ph 110V VT</td> <td rowspan="12" style="text-align: center;">(For details, refer to single units below)</td> <td rowspan="12" style="text-align: center;">(For details, refer to single units below)</td> <td rowspan="12" style="text-align: center;">(For details, refer to single units below)</td> <td>2 position</td> <td>Black</td> <td>TPI, voltage and VT fuse monitoring and runaway prevention.</td> </tr> <tr> <td>23</td> <td>FP0005-RTMU/1m-1-C02</td> <td>SuperTAPP Tap Changer Control & Monitor Unit</td> <td>110V AC</td> <td>1x3Ph 110V VT</td> <td>2 position</td> <td>Grey</td> <td>TPI, voltage and VT fuse monitoring and runaway prevention.</td> </tr> <tr> <td>24</td> <td>FP0005-RTMU/2m-1-C01</td> <td>SuperTAPP Tap Changer Control & Monitor Unit</td> <td>110V AC</td> <td>1x3Ph 110V VT</td> <td>3 position</td> <td>Black</td> <td>TPI, voltage and VT fuse monitoring and runaway prevention.</td> </tr> <tr> <td>25</td> <td>FP0005-RTMU/2m-1-C02</td> <td>SuperTAPP Tap Changer Control & Monitor Unit</td> <td>110V AC</td> <td>1x3Ph 110V VT</td> <td>3 position</td> <td>Grey</td> <td>TPI, voltage and VT fuse monitoring and runaway prevention.</td> </tr> <tr> <td>26</td> <td>FP0005-RTMU/1m-2-C01</td> <td>SuperTAPP Tap Changer Control & Monitor Unit</td> <td>220V AC</td> <td>1x3Ph 110V VT</td> <td>2 position</td> <td>Black</td> <td>TPI, voltage and VT fuse monitoring and runaway prevention.</td> </tr> <tr> <td>27</td> <td>FP0005-RTMU/1m-2-C02</td> <td>SuperTAPP Tap Changer Control & Monitor Unit</td> <td>220V AC</td> <td>1x3Ph 110V VT</td> <td>2 position</td> <td>Grey</td> <td>TPI, voltage and VT fuse monitoring and runaway prevention.</td> </tr> <tr> <td>28</td> <td>FP0005-RTMU/2m-2-C01</td> <td>SuperTAPP Tap Changer Control & Monitor Unit</td> <td>220V AC</td> <td>1x3Ph 110V VT</td> <td>3 position</td> <td>Black</td> <td>TPI, voltage and VT fuse monitoring and runaway prevention.</td> </tr> <tr> <td>29</td> <td>FP0005-RTMU/2m-2-C02</td> <td>SuperTAPP Tap Changer Control & Monitor Unit</td> <td>220V AC</td> <td>1x3Ph 110V VT</td> <td>3 position</td> <td>Grey</td> <td>TPI, voltage and VT fuse monitoring and runaway prevention.</td> </tr> </tbody> </table>			Product Codes	SuperTAPP (Single Units)	22	FP0005-RTMU/1m-1-C01	SuperTAPP Tap Changer Control & Monitor Unit	110V AC	1x3Ph 110V VT	(For details, refer to single units below)	(For details, refer to single units below)	(For details, refer to single units below)	2 position	Black	TPI, voltage and VT fuse monitoring and runaway prevention.	23	FP0005-RTMU/1m-1-C02	SuperTAPP Tap Changer Control & Monitor Unit	110V AC	1x3Ph 110V VT	2 position	Grey	TPI, voltage and VT fuse monitoring and runaway prevention.	24	FP0005-RTMU/2m-1-C01	SuperTAPP Tap Changer Control & Monitor Unit	110V AC	1x3Ph 110V VT	3 position	Black	TPI, voltage and VT fuse monitoring and runaway prevention.	25	FP0005-RTMU/2m-1-C02	SuperTAPP Tap Changer Control & Monitor Unit	110V AC	1x3Ph 110V VT	3 position	Grey	TPI, voltage and VT fuse monitoring and runaway prevention.	26	FP0005-RTMU/1m-2-C01	SuperTAPP Tap Changer Control & Monitor Unit	220V AC	1x3Ph 110V VT	2 position	Black	TPI, voltage and VT fuse monitoring and runaway prevention.	27	FP0005-RTMU/1m-2-C02	SuperTAPP Tap Changer Control & Monitor Unit	220V AC	1x3Ph 110V VT	2 position	Grey	TPI, voltage and VT fuse monitoring and runaway prevention.	28	FP0005-RTMU/2m-2-C01	SuperTAPP Tap Changer Control & Monitor Unit	220V AC	1x3Ph 110V VT	3 position	Black	TPI, voltage and VT fuse monitoring and runaway prevention.	29	FP0005-RTMU/2m-2-C02	SuperTAPP Tap Changer Control & Monitor Unit	220V AC	1x3Ph 110V VT	3 position	Grey	TPI, voltage and VT fuse monitoring and runaway prevention.
Product Codes	SuperTAPP (Single Units)																																																																						
22	FP0005-RTMU/1m-1-C01	SuperTAPP Tap Changer Control & Monitor Unit	110V AC	1x3Ph 110V VT	(For details, refer to single units below)	(For details, refer to single units below)	(For details, refer to single units below)	2 position	Black				TPI, voltage and VT fuse monitoring and runaway prevention.																																																										
23	FP0005-RTMU/1m-1-C02	SuperTAPP Tap Changer Control & Monitor Unit	110V AC	1x3Ph 110V VT				2 position	Grey				TPI, voltage and VT fuse monitoring and runaway prevention.																																																										
24	FP0005-RTMU/2m-1-C01	SuperTAPP Tap Changer Control & Monitor Unit	110V AC	1x3Ph 110V VT				3 position	Black				TPI, voltage and VT fuse monitoring and runaway prevention.																																																										
25	FP0005-RTMU/2m-1-C02	SuperTAPP Tap Changer Control & Monitor Unit	110V AC	1x3Ph 110V VT				3 position	Grey				TPI, voltage and VT fuse monitoring and runaway prevention.																																																										
26	FP0005-RTMU/1m-2-C01	SuperTAPP Tap Changer Control & Monitor Unit	220V AC	1x3Ph 110V VT				2 position	Black				TPI, voltage and VT fuse monitoring and runaway prevention.																																																										
27	FP0005-RTMU/1m-2-C02	SuperTAPP Tap Changer Control & Monitor Unit	220V AC	1x3Ph 110V VT				2 position	Grey				TPI, voltage and VT fuse monitoring and runaway prevention.																																																										
28	FP0005-RTMU/2m-2-C01	SuperTAPP Tap Changer Control & Monitor Unit	220V AC	1x3Ph 110V VT				3 position	Black				TPI, voltage and VT fuse monitoring and runaway prevention.																																																										
29	FP0005-RTMU/2m-2-C02	SuperTAPP Tap Changer Control & Monitor Unit	220V AC	1x3Ph 110V VT				3 position	Grey				TPI, voltage and VT fuse monitoring and runaway prevention.																																																										
<table border="1"> <thead> <tr> <th>Product Codes</th> <th>Accessories</th> </tr> </thead> <tbody> <tr> <td>30</td> <td>FP1007-FTPT/2-S01</td> <td>Tap Position Transducer</td> <td colspan="5" rowspan="4" style="text-align: center;">(For details, refer to single units below)</td> <td colspan="2" rowspan="4" style="text-align: center;">(For details, refer to single units below)</td> <td>Milliamp output (0 - 10mA, 0 - 20mA & 4 - 20mA).</td> </tr> <tr> <td>31</td> <td>FP1009-FAVT/1-S02</td> <td>Averaging Voltage Transformer (VT)</td> <td colspan="2" rowspan="2" style="text-align: center;">(For details, refer to single units below)</td> <td colspan="2" rowspan="2" style="text-align: center;">(For details, refer to single units below)</td> <td>For triple winding transformer applications (RTMU & SuperTAPP).</td> </tr> <tr> <td>32</td> <td>FP1013-FPFM/1-S01</td> <td>PF Meter with Clip-on CT (model MN114)</td> <td colspan="2" rowspan="2" style="text-align: center;">(For details, refer to single units below)</td> <td colspan="2" rowspan="2" style="text-align: center;">(For details, refer to single units below)</td> <td>-</td> </tr> <tr> <td>33</td> <td>FP1010-FLEM/1-S01</td> <td>Load Exclusion Module</td> <td colspan="2" rowspan="2" style="text-align: center;">(For details, refer to single units below)</td> <td colspan="2" rowspan="2" style="text-align: center;">(For details, refer to single units below)</td> <td>For DG, capacitor banks and troublesome loads (SuperTAPP relay).</td> </tr> </tbody> </table>			Product Codes	Accessories				30	FP1007-FTPT/2-S01				Tap Position Transducer	(For details, refer to single units below)					(For details, refer to single units below)		Milliamp output (0 - 10mA, 0 - 20mA & 4 - 20mA).	31	FP1009-FAVT/1-S02	Averaging Voltage Transformer (VT)	(For details, refer to single units below)		(For details, refer to single units below)		For triple winding transformer applications (RTMU & SuperTAPP).	32	FP1013-FPFM/1-S01	PF Meter with Clip-on CT (model MN114)	(For details, refer to single units below)		(For details, refer to single units below)		-	33	FP1010-FLEM/1-S01	Load Exclusion Module	(For details, refer to single units below)		(For details, refer to single units below)		For DG, capacitor banks and troublesome loads (SuperTAPP relay).																										
Product Codes	Accessories																																																																						
30	FP1007-FTPT/2-S01	Tap Position Transducer	(For details, refer to single units below)					(For details, refer to single units below)		Milliamp output (0 - 10mA, 0 - 20mA & 4 - 20mA).																																																													
31	FP1009-FAVT/1-S02	Averaging Voltage Transformer (VT)								(For details, refer to single units below)		(For details, refer to single units below)									For triple winding transformer applications (RTMU & SuperTAPP).																																																		
32	FP1013-FPFM/1-S01	PF Meter with Clip-on CT (model MN114)												(For details, refer to single units below)		(For details, refer to single units below)		-																																																					
33	FP1010-FLEM/1-S01	Load Exclusion Module								(For details, refer to single units below)		(For details, refer to single units below)						For DG, capacitor banks and troublesome loads (SuperTAPP relay).																																																					
<table border="1"> <thead> <tr> <th>Product Codes</th> <th>Legacy Relays (Single Units)</th> </tr> </thead> <tbody> <tr> <td>34</td> <td>FP0004-FVM/1m-1-S01</td> <td>Voltage Regulating Relay</td> <td>110V AC</td> <td>1X110V VT</td> <td>1xCT</td> <td>0.1, 0.5, 5A</td> <td rowspan="4" style="text-align: center;">(For details, refer to single units below)</td> <td>Black</td> <td>This product will be discontinued from 1st April 2017.</td> </tr> <tr> <td>35</td> <td>FP0004-FVM/1m-2-S01</td> <td>Voltage Regulating Relay</td> <td>220V AC</td> <td>1X110V VT</td> <td>1xCT</td> <td>0.1, 0.5, 5A</td> <td>Black</td> <td>This product will be discontinued from 1st April 2017.</td> </tr> <tr> <td>36</td> <td>RTPI/2m-1</td> <td>Tap Position Indicator with Runaway Prevention</td> <td>110V AC</td> <td colspan="2" rowspan="2" style="text-align: center;">(For details, refer to single units below)</td> <td colspan="2" rowspan="2" style="text-align: center;">(For details, refer to single units below)</td> <td>Black</td> <td>This product will be discontinued from 1st April 2017.</td> </tr> <tr> <td>37</td> <td>RTPI/2m-2</td> <td>Tap Position Indicator with Runaway Prevention</td> <td>220V AC</td> <td>Black</td> <td>This product will be discontinued from 1st April 2017.</td> </tr> </tbody> </table>			Product Codes	Legacy Relays (Single Units)	34	FP0004-FVM/1m-1-S01	Voltage Regulating Relay	110V AC	1X110V VT					1xCT	0.1, 0.5, 5A	(For details, refer to single units below)	Black	This product will be discontinued from 1st April 2017.	35	FP0004-FVM/1m-2-S01	Voltage Regulating Relay	220V AC	1X110V VT	1xCT	0.1, 0.5, 5A	Black	This product will be discontinued from 1st April 2017.	36	RTPI/2m-1	Tap Position Indicator with Runaway Prevention	110V AC	(For details, refer to single units below)		(For details, refer to single units below)		Black	This product will be discontinued from 1st April 2017.	37	RTPI/2m-2	Tap Position Indicator with Runaway Prevention	220V AC	Black	This product will be discontinued from 1st April 2017.																												
Product Codes	Legacy Relays (Single Units)																																																																						
34	FP0004-FVM/1m-1-S01	Voltage Regulating Relay	110V AC	1X110V VT	1xCT	0.1, 0.5, 5A	(For details, refer to single units below)	Black	This product will be discontinued from 1st April 2017.																																																														
35	FP0004-FVM/1m-2-S01	Voltage Regulating Relay	220V AC	1X110V VT	1xCT	0.1, 0.5, 5A		Black	This product will be discontinued from 1st April 2017.																																																														
36	RTPI/2m-1	Tap Position Indicator with Runaway Prevention	110V AC	(For details, refer to single units below)		(For details, refer to single units below)		Black	This product will be discontinued from 1st April 2017.																																																														
37	RTPI/2m-2	Tap Position Indicator with Runaway Prevention	220V AC					Black	This product will be discontinued from 1st April 2017.																																																														

Quotations:

Please contact Fundamentals Ltd for a quotation on either admin@fundamentalsltd.co.uk or call +44 (0) 1793 847163 and ask for Sales. **Please note - prices for SuperTAPP SG available on application.**

Terms & Conditions:

Fundamentals' Standard Terms & Conditions for Sale apply; a copy is available on application or reference can be made to our website at www.fundamentalsltd.co.uk.